















i n v e n t

### CAMERA CONTROLS

Icons on your camera – use them to their fullest potential!

	Shooting Mode		Snow		View Slideshow
	Picture Capture		Sunset		Stitch Panorama
	Flash Button		Video Quality		Move Images to Card
	Video Record		Self-Timer		Remove Red Eyes
	Playback		Adaptive Lighting		Rotate
	Zoom lever		Image Quality		Apply Artistic Effects
	Thumbnails		Burst		Enhance Photos
	Magnify		Tag		Modify Color
	Display Menus		Date & Time Imprint		Add Borders
	Delete		Exposure Compensation		Crop
	Back		Exposure Bracketing		Display Brightness
	Memory Card Indicator		White Balance		Camera Sounds
	Auto Shooting Mode		ISO Speed		Display Timeout
	Close UP		AE Metering		Digital Zoom
	Steady Photo		Camera Setup		USB Configuration
	Theater		Camera Help		TV Configuration
	Panorama		Favorite		Language

	Landscape		Buy Prints Online		Long Exposure Required
	Portrait		Photosmart Share Destinations		Auto Flash
	Action		# of Copies to Print		Flash On
	Night Portrait		Design Gallery		Flash Off
	Beach		Photosmart Express		

*No matter what brand of camera you use, Panasonic's Digital Photo Academy will help you get the most out of your equipment and take the best pictures possible!*