

Photo Academy



By Panasonic LUMIX

Icons on your camera – use them to their fullest potential!

Icons on your camera – use them to their fullest potential!					
lacksquare	Add Sound	③	Flash Off	7	Re-sizing
A	Alarm Clock	端端端	Fluorescent White Balance		Rotate Picture
	Albums	Ŧ	Format	s ¥ ÿ	S-Macro LED
₩	All Erase	HID	Hi Speed Sequential	SCN	Scene
	All Frame Reservation	allu	Histogram	£	Self-Portrait
	Auto		Index Display	<u>৩</u> [≗]	Self-Portrait & Timer
84	Beach / Snow	*:	Indoor	Ś	Self-Timer
1	Behind Glass	INFO	Information Display		Sequential Shooting
ij	Candlelight		Landscape	■ □ ■ □ 1	Shoot and Select
Q	Close-Up Playback	A	Landscape & Portrait	S	Silent Mode
\bigcirc	Cloudy	*	Macro	Д	Single Frame Reservation
T1	Cuisine		Monitor Adjustment		Single Frame Shooting
(F)	Date and Time	<u> </u>	Movie Mode	•	Spot Metering
<i>1</i> ₩	Delete	•>	Night Portrait	<u> </u>	Sunny Day (WB)
((/m)))	Digital Image Stabilization	R	Night Landscape	*	Sunset
€.	Display Language	OK FUNC	OK / Function	Si	Super Macro Mode
\odot	Dual Time	•	Playback	廿	Trimming
•	ESP Metering	n	Portrait	-₽-	Tungsten Light (WB)
†	Exposure Compensation	Д	Print	ઃ	Underwater Portrait
*	Favorite	Р	Program – Auto	9 4	Underwater Snapshot
4	Fill Flash	От	Protect	X 1	Underwater Wide 1
	Fireworks	€ :	Record Mode	•)))	Warning Sound
4	Flash Mode	©	Red Eye Reduction	WB AUTO	White Balance Auto