



## CAMERA CONTROLS

## By Panasonic LUMIX

Icons on your camera – use them to their fullest potential!

-	ieons on yo	ui cainera – use			u1.
<b>4</b> A	Auto Flash		Frame Composite	Ρ	Program Mode
AUTO PICT	Auto Picture	$oldsymbol{igen}$	Green Button		Protect
Â	Auto Flash & Red-Eye		Green Mode	Ó	Recording Mode
AWB	Auto White Balance	$\diamond$	Image Rotation		Red-Eye Compensation
	Battery Level	₽	Image Sound Copy	<b>K</b>	Resize
	Brightness Filter		Infinity Focus		SD Memory Card
	Built In Memory		Kids Mode	$\dot{\heartsuit}$	Self-Timer
۲¢]	Card Is Write- Protected		Landscape mode	ХL	Settings
	Continuous Shooting	*	Macro		Shade (White Balance)
	Cropping	Q,	Magnify		Slideshow
淡	Daylight	MF	Manual Focus	SOFT	Soft Flash
Ť	Delete		Manual White Balance	S.	Sports
→	Destination	MENU	Menu Button	AF	Standard Auto Focus
()	Digital SR Blur Reduction		Movie Mode	ΟΡΤΙΟ	Start-Up Screen
0	Digital Filter		Natural Skin Tone Mode	s	Super Macro
DPOF	DPOF		Night Scene Mode	<del>ين</del>	Surf & Snow Mode
<b>(4)</b>	Flash Off		Nine-Image Display	<b>A</b>	Tele Mode
4	Flash On	OK/DISPLAY	OK/Display Button	-%-	Tungsten (White Balance)
©_4	Flash On & Red-Eye	PF	Pan Focus	Ā	Voice Recording
₩Ĝ <b>≱</b>	Flower Mode	?? ♥?? ♥? ♥?</td <td>Pet Mode</td> <td></td> <td>Wide Mode</td>	Pet Mode		Wide Mode
	Fluorescent White Balance		Playback Mode		
ΨQ	Food Mode	65	Portrait Mode		

No matter what brand of camera you use, Panasonic's Digital Photo Academy will help you get the most out of your equipment and take the best pictures possible!